

# Image Settings for TOPODRONE P24

For more information on adjusting your image settings, check out our Telegram channel at the links below:

[Best Camera Settings. Introduction. Part 1 of 3.](#)

[Best Camera Settings. Semi-automatic and manual shooting modes. Part 2 of 3.](#)

[Best Camera Settings. Tips & Tricks. Part 3 of 3.](#)

## Connecting the camera to the Internet

To output TOPODRONE P24 to the Internet, the following components and conditions will be required:

1. Mobile device (smartphone or tablet) running Android OS (only Samsung, Honor, Xiaomi phones are tested, mobile devices from other manufacturers may not work correctly).
  2. 3G/4G/5G mobile internet or Wi-Fi network with internet connection
  3. USB Type-C to Type-C cable for connection to mobile device (supplied with smartphone/tablet)
  4. TOPODRONE P24
- 
1. Install TOPODRONE P24 according to the delivery set
  2. Power up TOPODRONE P24 by connecting it to the drone via SHLD port, powerbank or power supply.
  3. Wait for the camera to turn on and boot up.
  4. Connect the USB Type-C cable to a mobile device (smartphone or tablet) running Android and the USB Type-C 1 port on the TOPODORNE P24.
  5. Make sure that the mobile device has an active internet connection via 3G/4G/5G or Wi-Fi.
  6. On (1) mobile device, go to menu: settings / connections / mobile hotspot and modem / USB modem mode.
  7. TOPODRONE P24 is displayed on the Internet.

---

Revision #3

Created 30 October 2024 09:41:09 by Tatiana

Updated 18 December 2024 13:14:43 by Tatiana