


# Settings Tab

This tab allows you to change camera settings, described on previous step

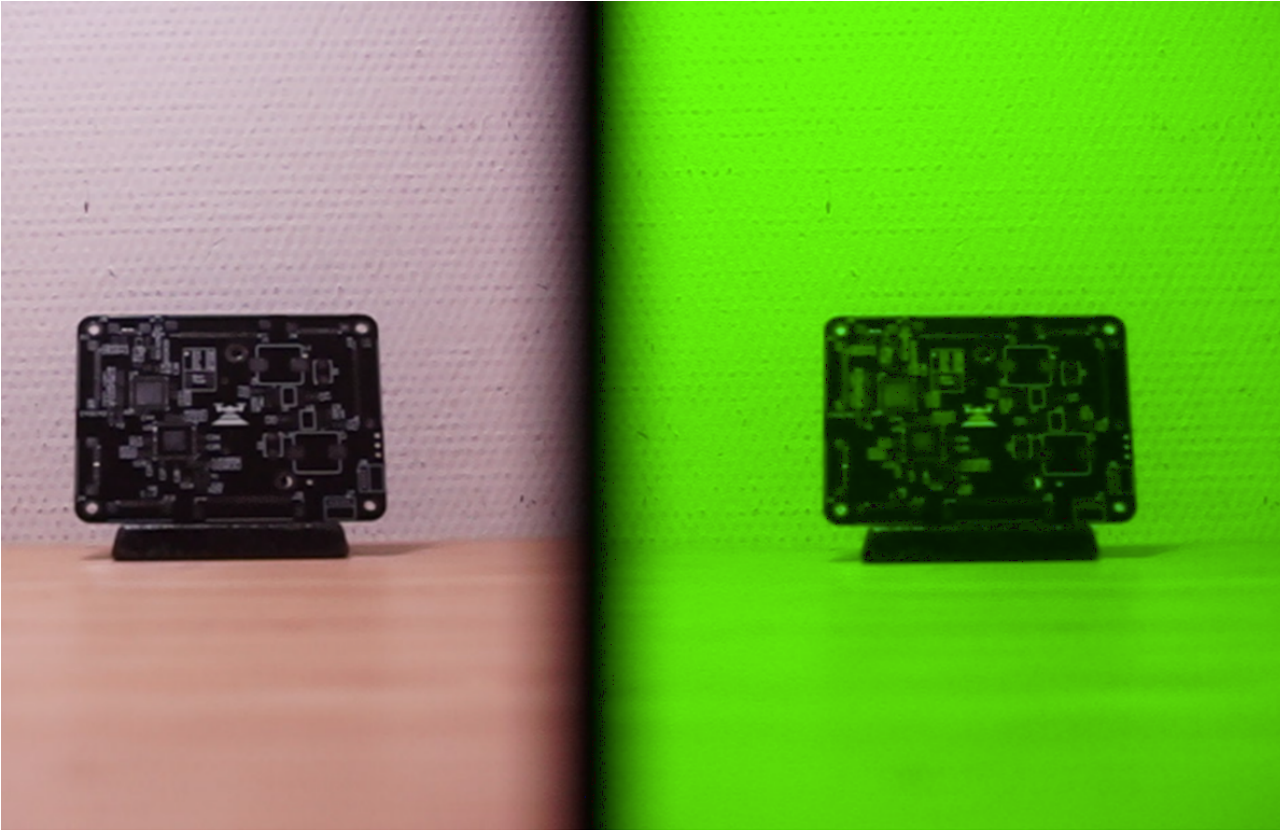

	FOCUS	TAKE	Start video rec	Stop video rec	-	+
	<b>Focus Mode</b>					
1 MF					1 MF	▼
					<b>PM</b>	
4 S					4 S	▼
					<b>ISO</b>	
9 400					9 400	▼
					<b>Shutter</b>	
31 1/30					31 1/30	▼
					<b>Aperture</b>	
0 N/A					0 N/A	▼
					<b>EV</b>	
16 0.0					16 0.0	▼
					<b>WB</b>	
2 Daylight					2 Daylight	▼
					<b>JPEG Quality</b>	
2 X.Fine					2 X.Fine	▼

Also, the following settings are also available on the settings page:

**WB** - White Balance (White Balance Scenario)

Available values: Auto/Daylight/Shade/Cloudy

**JPEG Quality** - JPEG quality

Available values: STD/Fine/X.Fine/RAW.

**[FOCUS]** – camera will make focusing if pressed. Available in AF mode only.

**[TAKE]** – shutter button, camera will take a picture if pressed

**[Start video rec]** – camera will start video recording if pressed

**[Stop video rec]** – camera will stop video recording if pressed


**[-] [+]** – zoom control buttons if the lens has a zoom control

TOPODRONE P24 requires forced cooling when recording video. Avoid overheating the camera.

The current values of the camera parameters are displayed in the left column.

## Tab HW

On the HW tab, use the buttons to navigate through the TOPODRONE P24 menu. This requires an HDMI connection to an external monitor. Use HW tab only for specific custom settings.

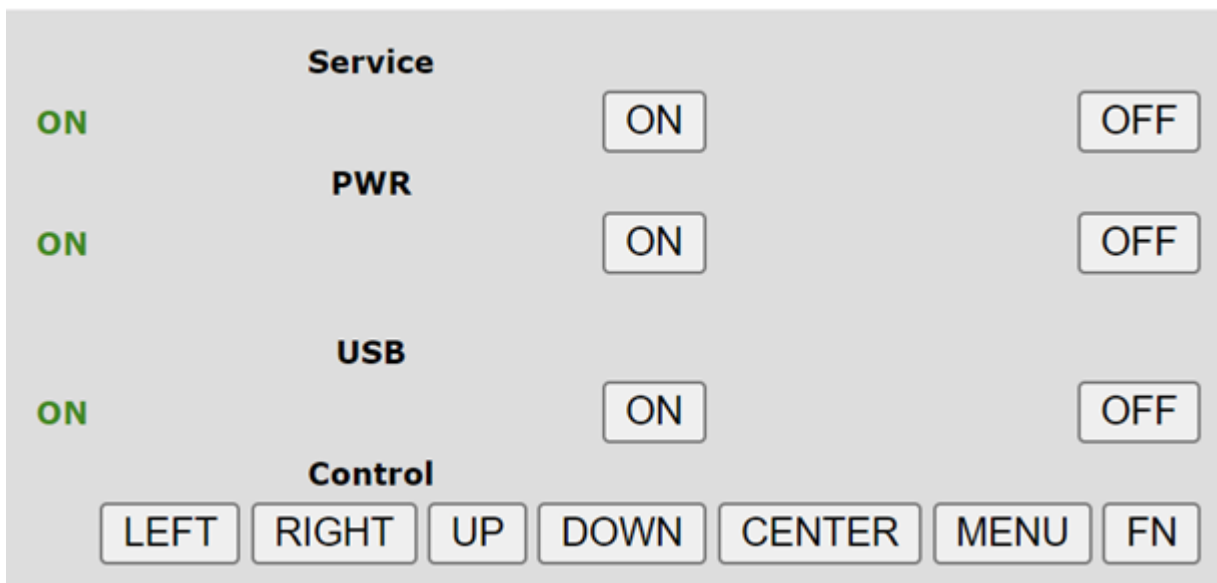

Revision #20

Created 30 October 2024 09:02:53 by Tatiana

Updated 11 November 2024 15:31:52 by Support 1