

Memory card: recommendations, installation, data uploading

TOPODRONE P61 uses SD XC-II memory cards as the internal storage medium. Due to the high resolution of images and the high frequency of photography, it is recommended to use only SD XC-II format memory cards. A distinctive feature of the SD XC-II format is the presence of the second row of pins. Turn off the power to the drone. Lower the camera in the Pitch axis by 90 degrees. Remove the memory card.



Step 1: Turn off the drone's power, make sure that the suspension does not work.



Step 2: Turn and tilt the camera with the lens facing downward as shown in the photo



Step 3: Press the memory card with your finger until it clicks into place.



Step 4: Remove the memory card by pulling it toward you.

Do not delete all files or format the memory card. To free up space, delete only .JPEG image files in the DCIM folder, otherwise it may cause the device to malfunction.

Revision #5

Created 2 October 2024 11:54:47 by Tatiana

Updated 18 December 2024 10:50:48 by Tatiana