

TOPODRONE Post Processing software installer

- [TOPODRONE Post Processing software installer](#)
- [Starting the program and entering the key](#)
- [License renewal request](#)
- [Software running w/o Internet connection](#)

TOPODRONE Post Processing software installer

[Download TOPODRONE Post Processing software installer](#)

About the TOPODRONE Post Processing software installer


TOPODRONE Post Processing software installer is a compact application designed primarily to automate the process of downloading TOPODRONE Post Processing software distributions. This application greatly simplifies the management of software updates and versions, providing users with access to the latest versions and enhancements.

In addition to the basic download function, the program has the following features:


1. Downloading current software versions: The downloader provides the ability to download new versions of TOPODRONE Post Processing that have been released during the upgrade license period. This allows users to stay on the cutting edge of technology and utilize the latest enhancements and patches.
2. View Change Records (Changelog): The built-in Change Viewer provides users with information on all updates released as part of new distributions. This provides a quick overview of innovations, bug fixes, and functionality improvements, which is especially useful for assessing the impact of updates on workflows.
3. Upgrade License Renewal: The software installer offers an easy and affordable way to extend the validity of license key upgrade control, allowing users to continue using the latest software features without a service interruption.
4. Software Version Upgrade: the software installer also provides functionality to perform upgrades to more advanced versions of the software: PRO or Expert. These versions offer advanced features and tools for deeper analysis and data processing.

Download TOPODRONE Post Processing with license key

Software initialization: when the software installer is launched, a loader window opens where the user can start the installation and activation process.

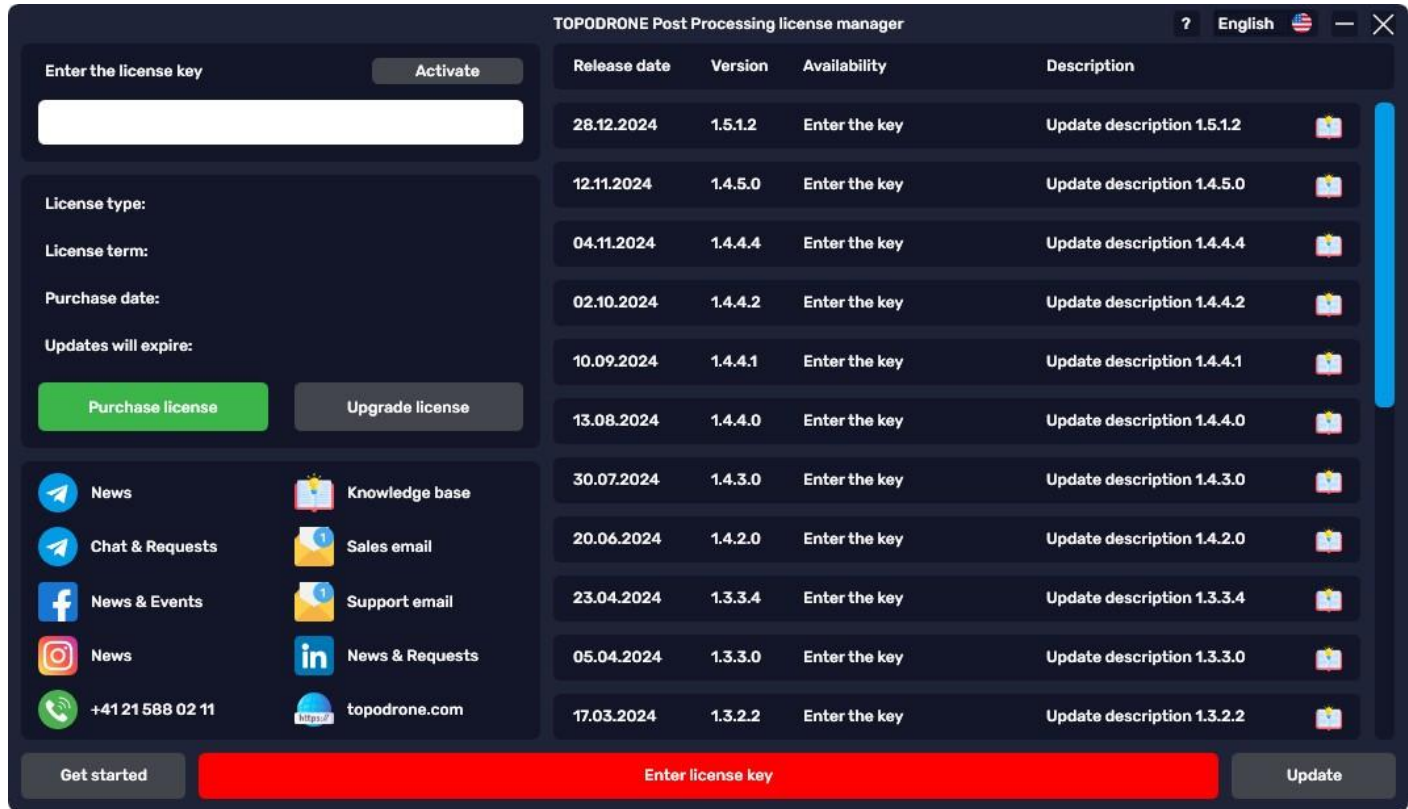

Entering the license key: If you have a valid license key, you must enter it in the designated field marked "Enter the license key". Then click Activate to view the available versions of TOPODRONE Post Processing.

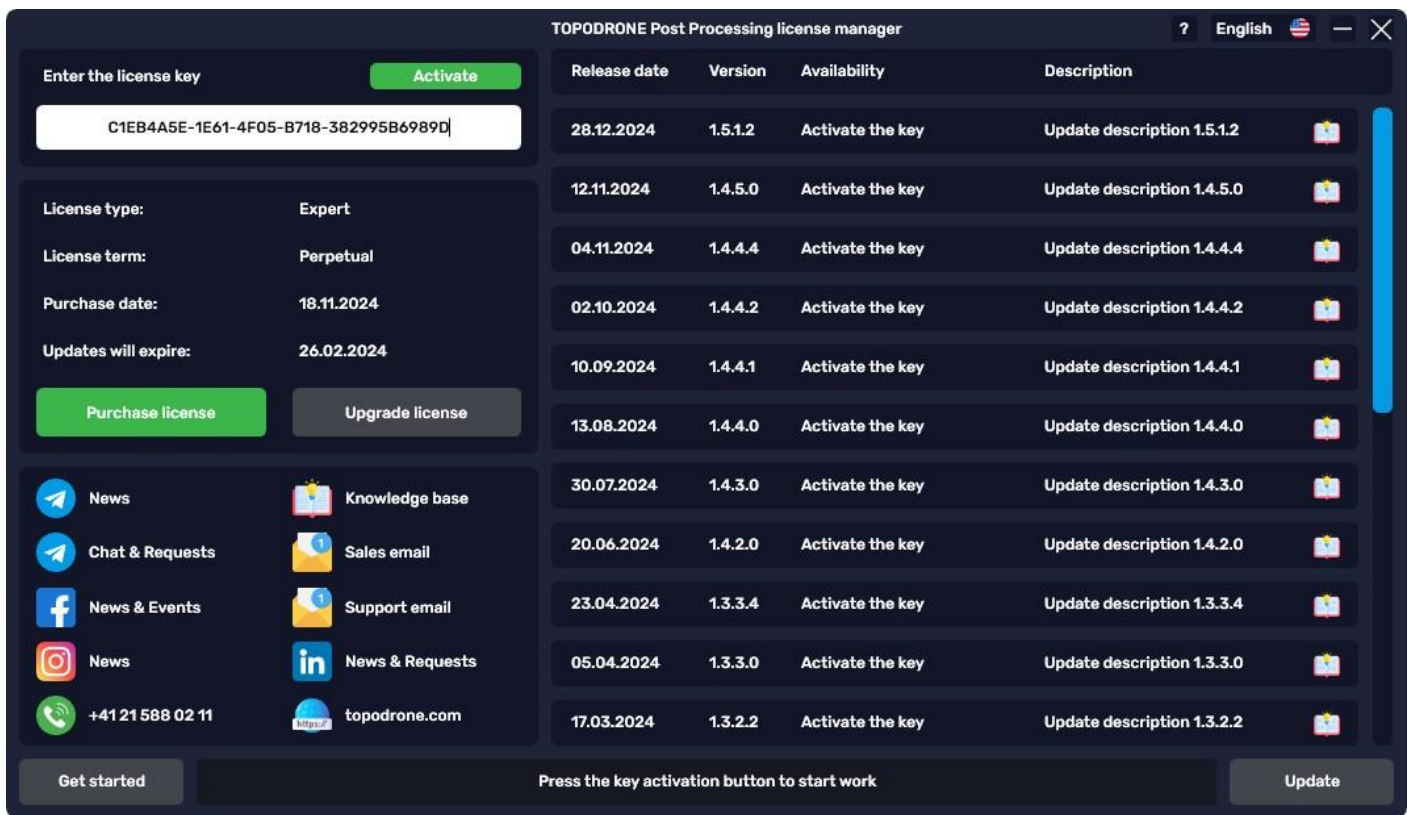

The license key consists of 36 characters and has the following format: *****_****_****_****_*****. If your key consists of 19 characters and is presented in the form ****_****_****_****_****, it indicates that it belongs to the previous licensing system and is not suitable for current software versions. To get a new license key, it is recommended to use the "Support mail" button or send a request to e-mail, specifying the name of the equipment used and the name of your organization.

Displaying available versions: After successfully entering the license key, the right side of the program interface will display information about the software versions available for download. Versions available for download and installation within the current license key validity period are highlighted in blue, while versions that require license extension are highlighted in gray.

Enter the license key

Deactivate

C1EB4A5E-1E61-4F05-B718-382995B6989D

License type: Expert

License term: Perpetual

Purchase date: 18.11.2024

Updates will expire: 26.02.2024

Purchase additional

Upgrade license

News

Knowledge base

Chat & Requests

Sales email

News & Events

Support email

News

News & Requests

+41 21 588 02 11

topodrone.com

Get started

Get started, select a release to update, or renew updates and support

Update

Release date	Version	Availability	Description
30.07.2024	1.4.3.0	Extend for 1 year	Update description 1.4.3.0
20.06.2024	1.4.2.0	Extend for 1 year	Update description 1.4.2.0
23.04.2024	1.3.3.4	Extend for 1 year	Update description 1.3.3.4
05.04.2024	1.3.3.0	Extend for 1 year	Update description 1.3.3.0
17.03.2024	1.3.2.2	Extend for 1 year	Update description 1.3.2.2
23.11.2023	1.2.0.1	Installed	Update description 1.2.0.1
20.11.2023	1.2.0.0	Available	Update description 1.2.0.0
13.11.2023	1.1.17.0	Available	Update description 1.1.17.0
01.11.2023	1.1.16.1	Available	Update description 1.1.16.1
30.10.2023	1.1.16.0	Available	Update description 1.1.16.0
04.10.2023	1.1.15.0	Available	Update description 1.1.15.0

Software update: To update the TOPODRONE Post Processing software, select the appropriate line in the list of available versions, which will be highlighted in green color, then click the “Download” button and specify the path to the folder to save the downloaded file.

Enter the license key

Deactivate

C1EB4A5E-1E61-4F05-B718-382995B6989D

License type: Expert

License term: Perpetual

Purchase date: 18.11.2024

Updates will expire: 26.02.2024

Purchase additional

Upgrade license

News

Knowledge base

Chat & Requests

Sales email

News & Events

Support email

News

News & Requests

+41 21 588 02 11

topodrone.com


Get started

Release 1.2.0.1 is available for installation

Update

Release date	Version	Availability	Description
30.07.2024	1.4.3.0	Extend for 1 year	Update description 1.4.3.0
20.06.2024	1.4.2.0	Extend for 1 year	Update description 1.4.2.0
23.04.2024	1.3.3.4	Extend for 1 year	Update description 1.3.3.4
05.04.2024	1.3.3.0	Extend for 1 year	Update description 1.3.3.0
17.03.2024	1.3.2.2	Extend for 1 year	Update description 1.3.2.2
23.11.2023	1.2.0.1	Available	Update description 1.2.0.1
20.11.2023	1.2.0.0	Available	Update description 1.2.0.0
13.11.2023	1.1.17.0	Available	Update description 1.1.17.0
01.11.2023	1.1.16.1	Available	Update description 1.1.16.1
30.10.2023	1.1.16.0	Available	Update description 1.1.16.0
04.10.2023	1.1.15.0	Available	Update description 1.1.15.0


Download Progress Display: The bottom of the window will display the download progress percentage, allowing the user to track the process.

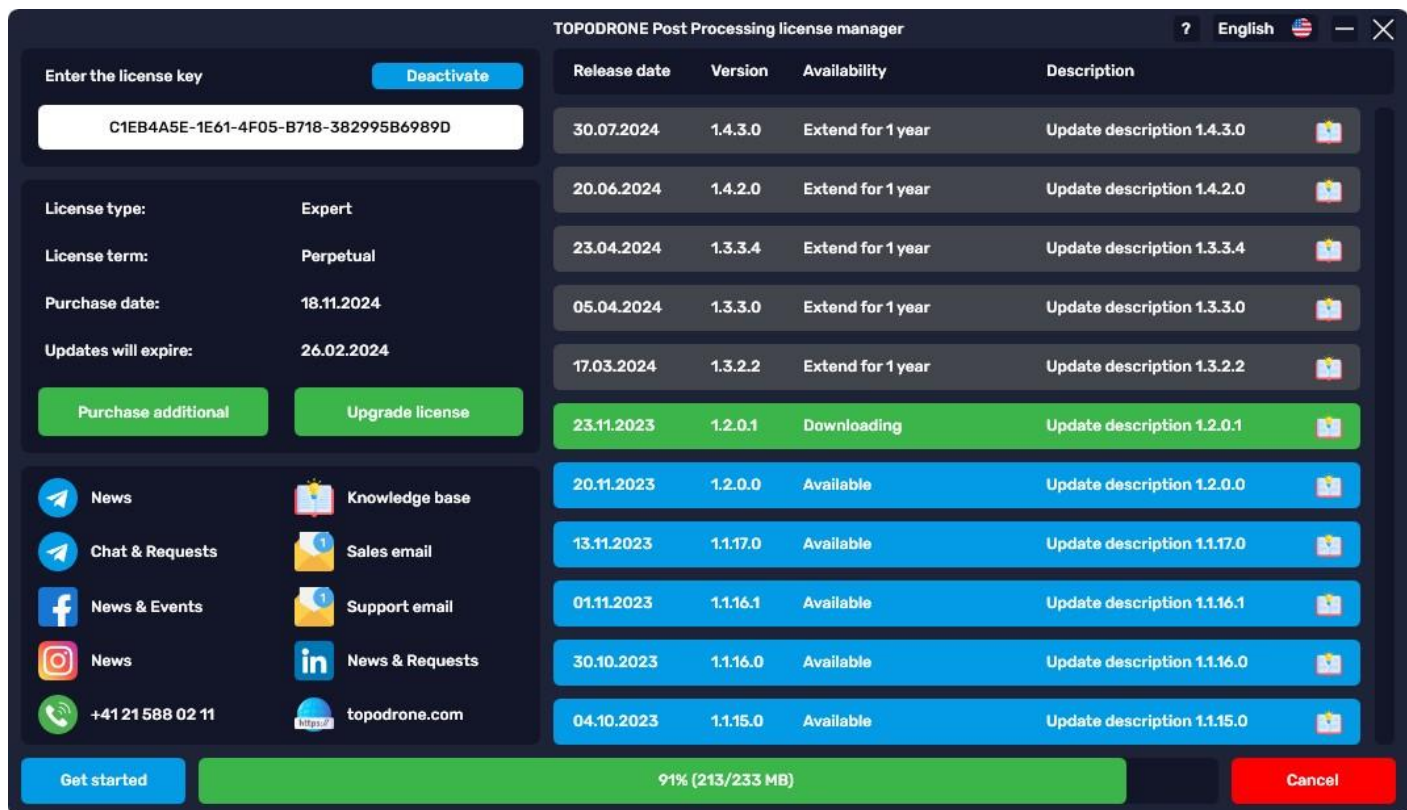

Installation Process: After the download is complete, install the software. In the installer window that opens, follow the standard procedures to complete the TOPODRONE Post Processing software installation.

Activation and deactivation of TOPODRONE Post Processing program

After successful installation, launch the program and click "Get Started". The program will be activated and ready for use, allowing you to successfully perform tasks related to post-processing data and implementing the functionality provided by the TOPODRONE system.

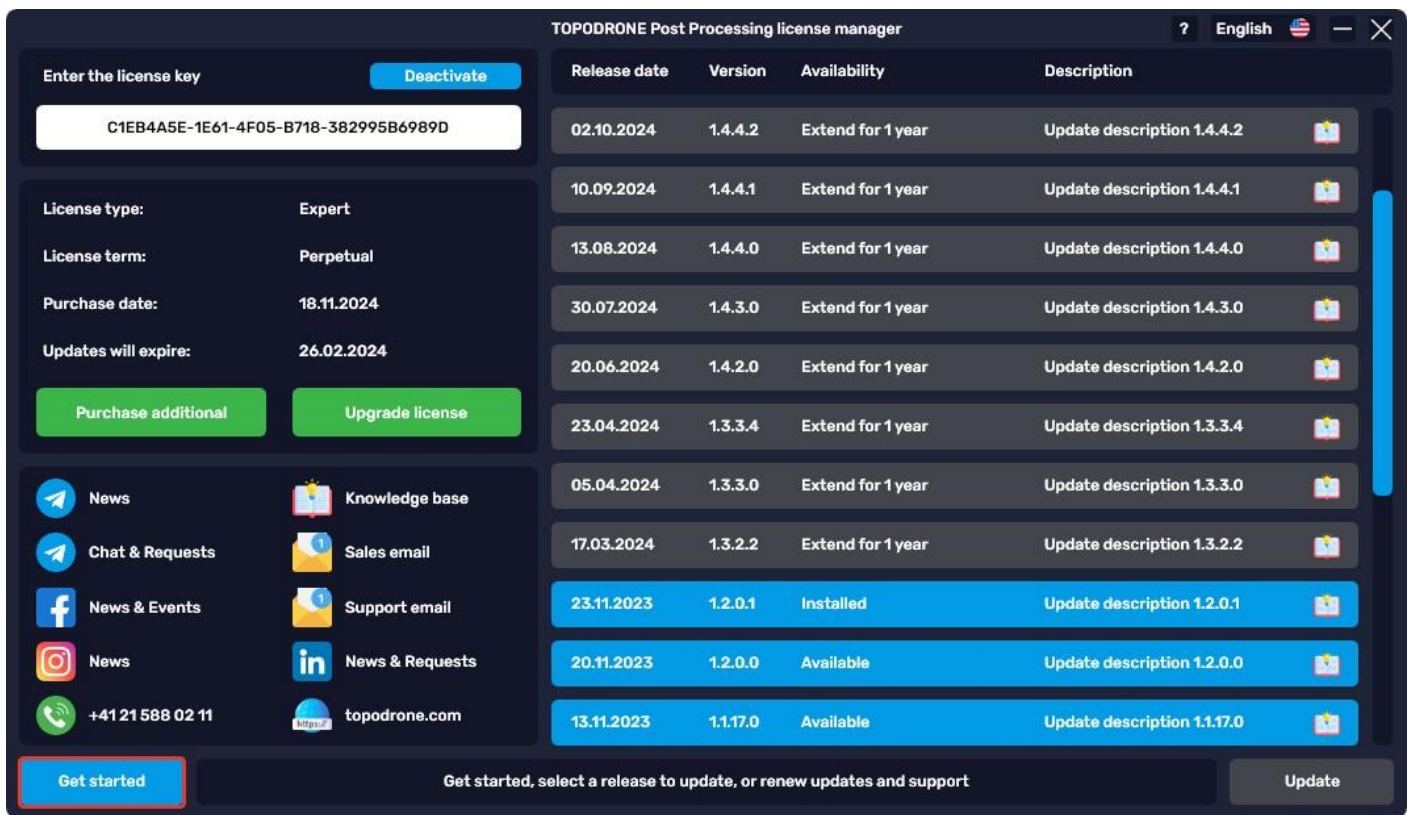

These steps provide a clear understanding of the software installation and activation process, making it much easier for users to interact with the product.

To deactivate the software, click on the “Revoke” button. Only after this action you will be able to activate another device.

When you run the program for the first time, the following message may appear: “To run this application, you must install .NET Core. Would you like to download it now?” It is necessary to download and install this library.

Sending a License Renewal Request

During software installation, the user is provided with information about the current version of the program and available versions for updating.

Enter the license key

Deactivate

C1EB4A5E-1E61-4F05-B718-382995B6989D

License type: Expert

License term: Perpetual

Purchase date: 18.11.2024

Updates will expire: 26.02.2024

Purchase additional

Upgrade license

News

Chat & Requests

News & Events

News

+41 21 588 02 11

Knowledge base

Sales email

Support email

News & Requests

topodrone.com

Release date

Version

Availability

Description

02.10.2024	1.4.4.2	Extend for 1 year	Update description 1.4.4.2
10.09.2024	1.4.4.1	Extend for 1 year	Update description 1.4.4.1
13.08.2024	1.4.4.0	Extend for 1 year	Update description 1.4.4.0
30.07.2024	1.4.3.0	Extend for 1 year	Update description 1.4.3.0
20.06.2024	1.4.2.0	Extend for 1 year	Update description 1.4.2.0
23.04.2024	1.3.3.4	Extend for 1 year	Update description 1.3.3.4
05.04.2024	1.3.3.0	Extend for 1 year	Update description 1.3.3.0
17.03.2024	1.3.2.2	Extend for 1 year	Update description 1.3.2.2
23.11.2023	1.2.0.1	Installed	Update description 1.2.0.1
20.11.2023	1.2.0.0	Available	Update description 1.2.0.0
13.11.2023	1.1.17.0	Available	Update description 1.1.17.0

Get started

Request an invoice for extended support to install 1.3.2.2 release

Extend


20.06.2024	1.4.2.0	Available	Update description 1.4.2.0	
05.04.2024	1.3.3.0	Installed	Update description 1.3.3.0	
30.07.2024	1.4.3.0	Extend for 1 year	Update description 1.4.3.0	

Available version

Selected version

Versions are not available for the current key, renewal is required

If the current version of the software cannot be updated, you must initiate the license renewal process. To do this, the user is asked to select a new target version and request an invoice for payment by filling out the feedback form.

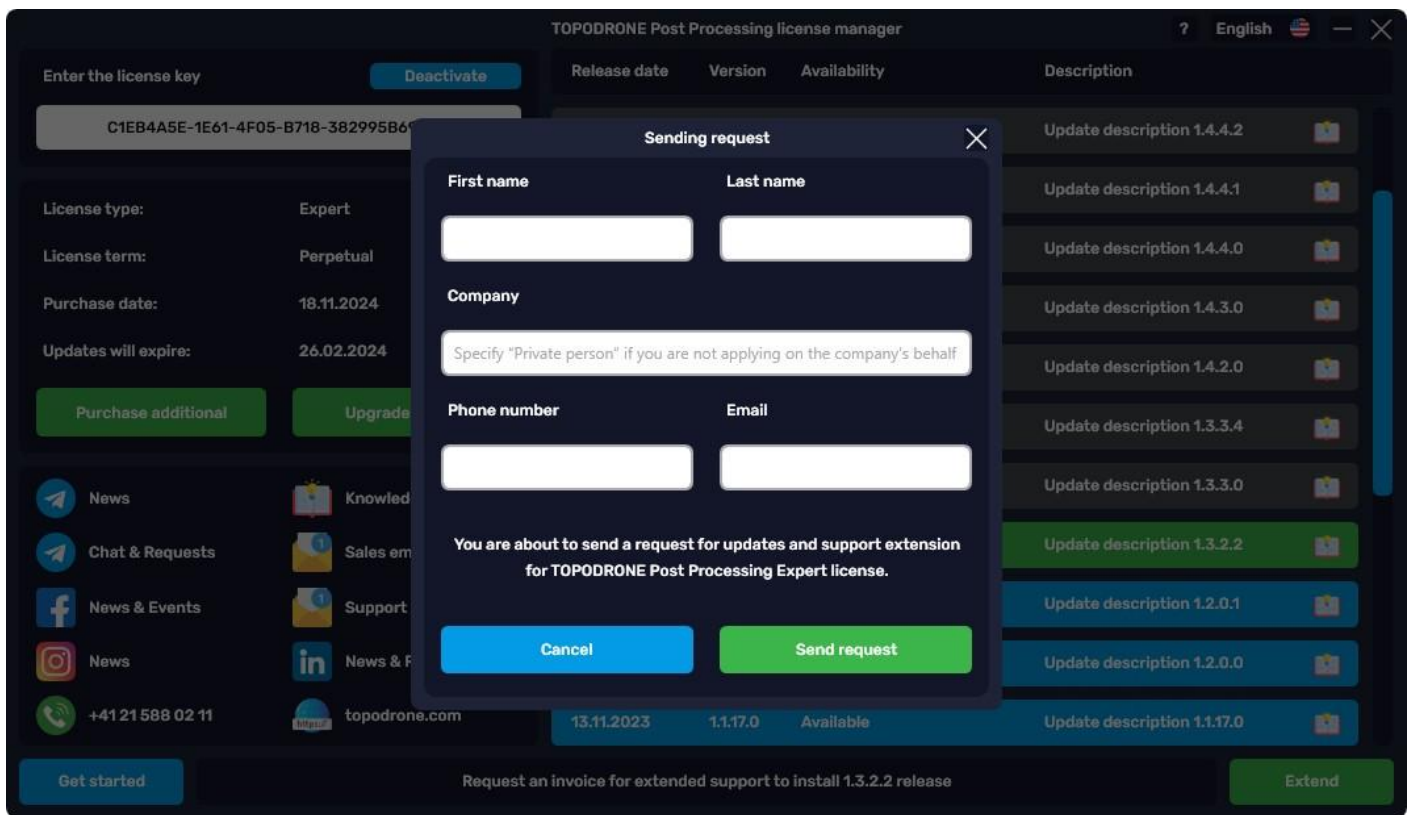

If you have a license key, enter it in the designated field for activation and click "Activate".

After successful verification of the license key, information about available license modifications will be displayed, including the possibility of purchasing a new version or upgrading the current version of TOPODRONE Post Processing to a more advanced one.

Enter the license key

Deactivate

C1EB4A5E-1E61-4F05-B718-382995B6989D

License type: Expert

License term: Perpetual

Purchase date: 18.11.2024

Updates will expire: 26.02.2024

Purchase additional

Upgrade license

News

Knowledge base

Chat & Requests

Sales email

News & Events

Support email

News

News & Requests

+41 21 588 02 11

topodrone.com

Get started

Request an invoice for extended support to install 1.3.2.2 release

Extend

Release date	Version	Availability	Description
02.10.2024	1.4.4.2	Extend for 1 year	Update description 1.4.4.2
10.09.2024	1.4.4.1	Extend for 1 year	Update description 1.4.4.1
13.08.2024	1.4.4.0	Extend for 1 year	Update description 1.4.4.0
30.07.2024	1.4.3.0	Extend for 1 year	Update description 1.4.3.0
20.06.2024	1.4.2.0	Extend for 1 year	Update description 1.4.2.0
23.04.2024	1.3.3.4	Extend for 1 year	Update description 1.3.3.4
05.04.2024	1.3.3.0	Extend for 1 year	Update description 1.3.3.0
17.03.2024	1.3.2.2	Extend for 1 year	Update description 1.3.2.2
23.11.2023	1.2.0.1	Installed	Update description 1.2.0.1
20.11.2023	1.2.0.0	Available	Update description 1.2.0.0
13.11.2023	1.1.17.0	Available	Update description 1.1.17.0

In the left panel, the user must select one of the options: "Buy a new one" or "Improve the current one" to get acquainted with the update capabilities. As a result of this action, information about software versions will be displayed with a list of available modules for each version.

Enter the license key

Deactivate

7B5CC90E-EE0A-49C6-8AF2-381D3680479D

License type: Basic

License term: Perpetual

Purchase date: 23.07.2024

Updates will expire: Perpetual

Purchase additional

Upgrade license

News

Knowledge base

Chat & Requests

Sales email

News & Events

Support email

News

News & Requests

+41 21 588 02 11

topodrone.com

Get started

Select the license that suits your needs and submit a request for purchase

Back

TOPODRONE Post Processing	Basic	Pro	Expert
PPK Post Processing	+	+	+
LIDAR Cloud Generation	+	+	+
AQUAMAPPER Post Processing	+	+	+
PRJ redactor	+	+	+
Point cloud viewer	+	+	+
Track trimming and stitching	+	+	+
IMR trimming	+	+	+
RTK Post Processing		+	+
Static Post Processing		+	+
Precise Post Processing (PPP)		+	+
Coordinates converter		+	+
GNSS data converter		+	+
Static observations on the map		+	+
LIDAR Post Processing			+
LAS/LAZ filters			+
GNSS data archive			+
RINEX merge			+
Satellite filtering			+
Focal length calculation			+
Forest inventory			+

Purchase

Purchase

Purchase

The TOPODRONE Post Processing loader also contains up-to-date information about all available modules in the program. Each version includes a specific set of modules grouped under three licenses: Basic, Pro, and Expert.

To get detailed information about each module, you can click on its name, which will redirect you to the corresponding section of the TOPODRONE knowledge base with a full description of its characteristics and functionality.

Feedback from TOPODRONE is available through all specified communication channels to resolve any issues that arise.

Enter the license key

7B5CC90E-EE0A-49C6-8AF2-381D3680479D

Deactivate

License type:

Basic

License term:

Perpetual

Purchase date:

23.07.2024

Updates will expire:

Perpetual

Purchase additional

Upgrade license

News

Knowledge base

Chat & Requests

Sales email

News & Events

Support email

News

News & Requests

+41 21 588 02 11

topodrone.com

TOPODRONE Post Processing

PPK Post Processing

LIDAR Cloud Generation

AQUAMAPPER Post Processing

PRJ redactor

Point cloud viewer

Track trimming and stitching

IMR trimming

RTK Post Processing

Static Post Processing

Precise Post Processing (PPP)

Coordinates converter

GNSS data converter

Static observations on the map

LIDAR Post Processing

LAS/LAZ filters

GNSS data archive

RINEX merge

Satellite filtering

Focal length calculation

Forest inventory

Basic

Pro

Expert

Purchased

Upgrade

Upgrade

Get started

Select the license that suits your needs and submit a request for an upgrade

Back

Starting the program and entering the key

Program Initialization: When you start the software, the bootloader window opens, where the user can start the installation and activation process.

The screenshot shows the 'TOPODRONE Post Processing software installer' window. It features a dark blue background with white text. On the left, there's a section for entering the license key, including fields for 'License type:', 'License term:', 'Purchase date:', and 'Updates will expire:'. Below these are 'Purchase license' and 'Upgrade license' buttons. Further down are links for 'News', 'Chat & Requests', 'Knowledge base', 'Sales email', 'Support email', and 'topodrone.com'. A large red button labeled 'Enter the license key' is at the bottom left. On the right, a table lists software updates with columns for 'Release date', 'Version', 'Availability', and 'Description'. Each row includes a 'Download' button. The table contains 10 rows of update information.

Release date	Version	Availability	Description
12.11.2024	1.4.5.0	Enter the key	Update description 1.4.5.0
04.11.2024	1.4.4.4	Enter the key	Update description 1.4.4.4
02.10.2024	1.4.4.2	Enter the key	Update description 1.4.4.2
10.09.2024	1.4.4.1	Enter the key	Update description 1.4.4.1
13.08.2024	1.4.4.0	Enter the key	Update description 1.4.4.0
30.07.2024	1.4.3.0	Enter the key	Update description 1.4.3.0
20.06.2024	1.4.2.0	Enter the key	Update description 1.4.2.0
23.04.2024	1.3.3.4	Enter the key	Update description 1.3.3.4
05.04.2024	1.3.3.0	Enter the key	Update description 1.3.3.0
17.03.2024	1.3.2.2	Enter the key	Update description 1.3.2.2

Entering the license key: If you have a valid license key, you must enter it in the designated field marked "Enter the license key".

The license key consists of 36 characters and has the format: *****_****_****_****_*****. If your key consists of 19 characters and is presented in the form ****_****_****_****, this indicates that it belongs to the previous licensing system and is not suitable for current versions of the software. To get a new license key, it is recommended to use the "Support Mail" button or send a request to the email address support@topodrone.com, specifying the name of the equipment used and the name of your organization.

Display of available versions: After successfully entering the license key, information about available software versions will appear in the right part of the program interface. Versions that are available for download and installation within the current license key validity period are highlighted in blue, while gray indicates versions that require a license renewal to be used.

Enter the license key

C1EB4A5E-1E61-4F05-B718-382995B6989D

License type:Pro

License term:Perpetual

Purchase date:20.06.2023

Updates will expire:20.06.2024

Purchase additional

Upgrade license

News

Chat & Requests

News & Events

News

+41 21 588 02 11

Knowledge base

Sales email

Support email

News & Requests


topodrone.com

Release date	Version	Availability	Description
12.11.2024	1.4.5.0	Extend for 3 years	Update description 1.4.5.0
04.11.2024	1.4.4.4	Extend for 2 years	Update description 1.4.4.4
02.10.2024	1.4.4.2	Extend for 2 years	Update description 1.4.4.2
10.09.2024	1.4.4.1	Extend for 2 years	Update description 1.4.4.1
13.08.2024	1.4.4.0	Extend for 1 year	Update description 1.4.4.0
30.07.2024	1.4.3.0	Extend for 1 year	Update description 1.4.3.0
20.06.2024	1.4.2.0	Available	Update description 1.4.2.0
23.04.2024	1.3.3.4	Available	Update description 1.3.3.4
05.04.2024	1.3.3.0	Installed	Update description 1.3.3.0
17.03.2024	1.3.2.2	Available	Update description 1.3.2.2


Select a release available for installation or request an invoice for extended support

Download

Software Update: To update the TOPODRONE Post Processing software, select the appropriate line in the list of available versions, which will be highlighted in green, then click the "Download" button and specify the folder path to save the downloaded file.

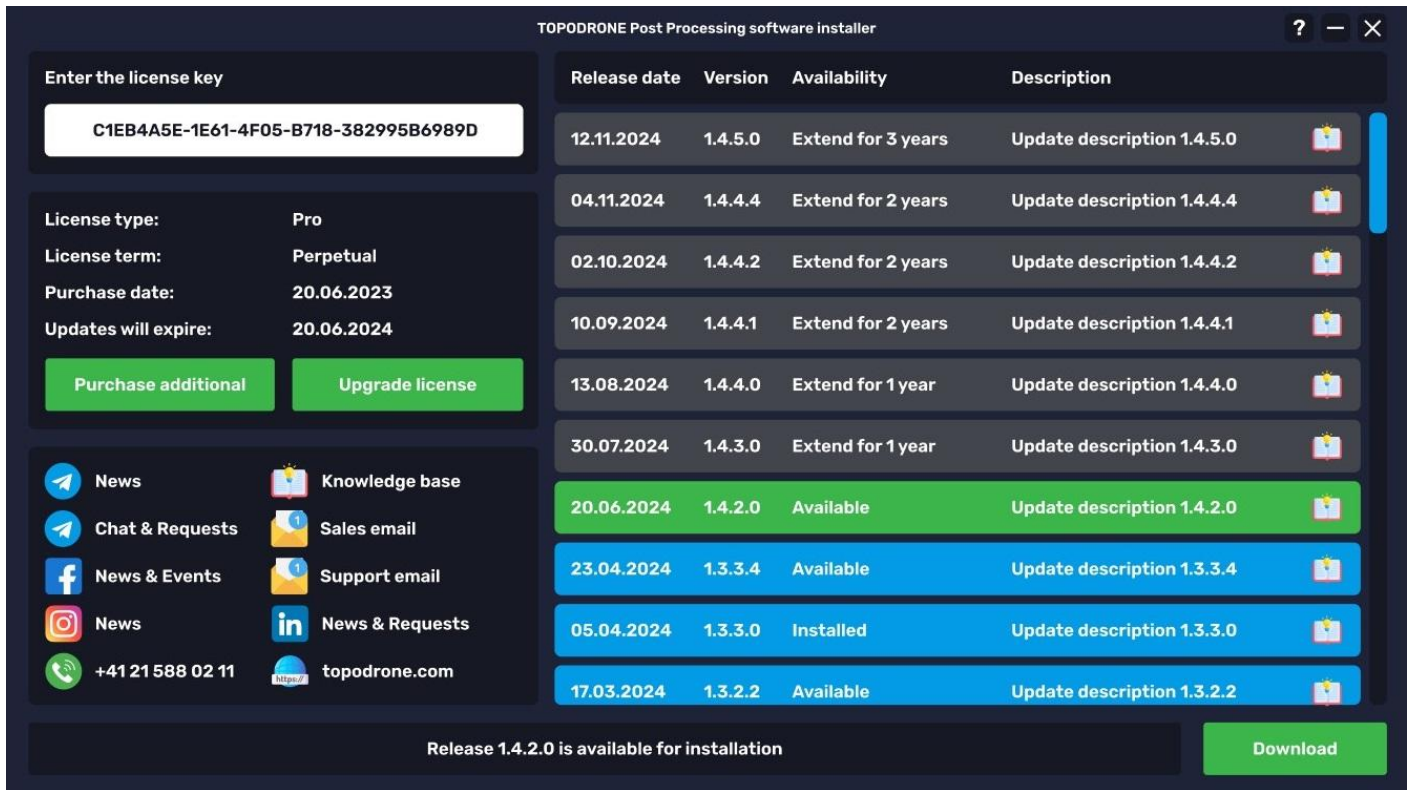

Displaying the download progress: The download progress percentage will be displayed at the bottom of the window, which allows the user to track the process.

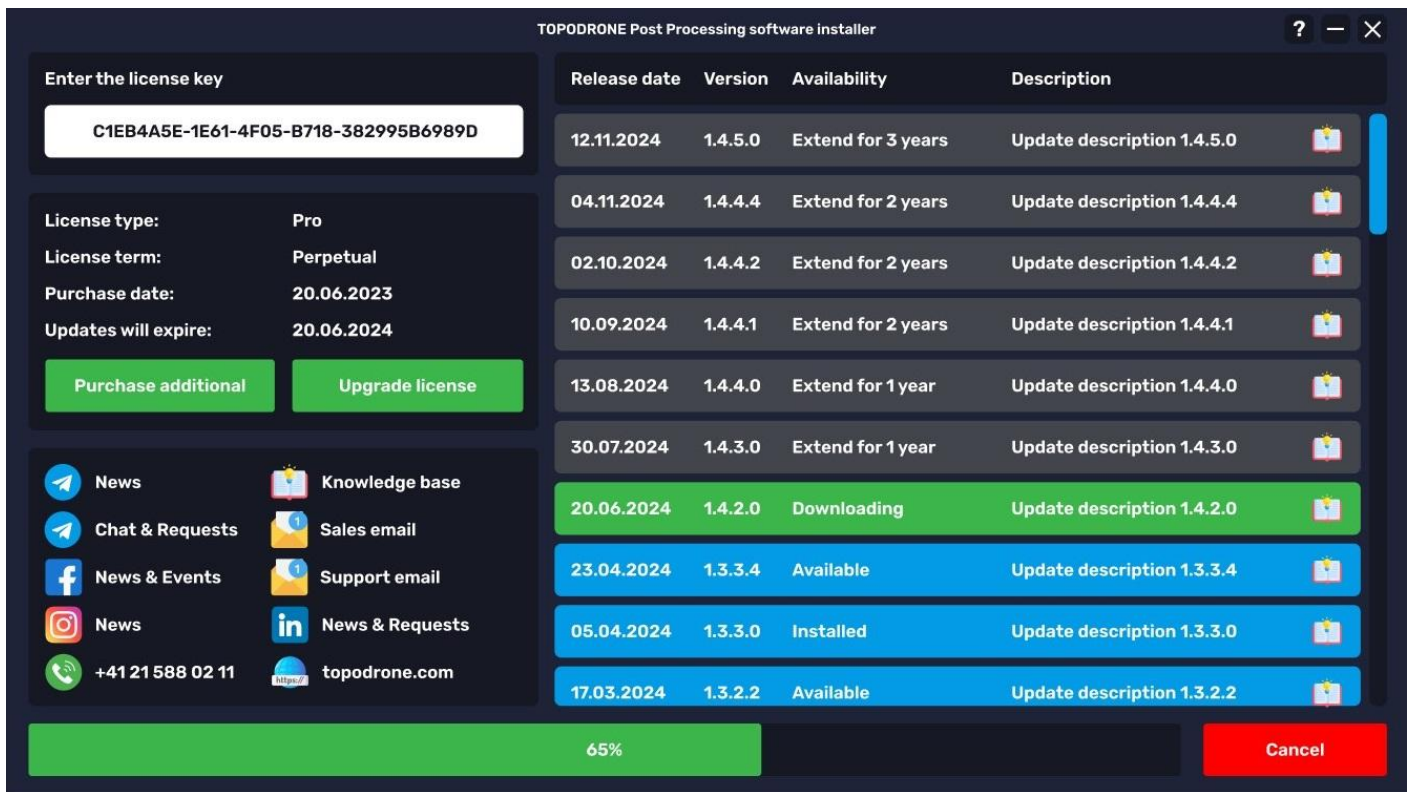

Installation Process: After the download is complete, the installer window will automatically open, where you must follow the standard procedures to complete the installation of TOPODRONE Post Processing software.

Activating the program: After successful installation, run TOPODRONE Post Processing. On the registration screen, enter your license key in the appropriate field for the serial number and click "Activate".


Ready to work: The program will be activated and ready for use, allowing you to successfully perform tasks related to post-processing data and implementing the functionality provided by the TOPODRONE system.

These steps provide a clear understanding of the software installation and activation process, making it much easier for users to interact with the product.

License renewal request

Software running w/o Internet connection

If there is no internet connection, the TPP software downloader will not be able to connect to the server. When you start the TPP software downloader, the following window will open with “Server is unavailable or no network connection” at the bottom.

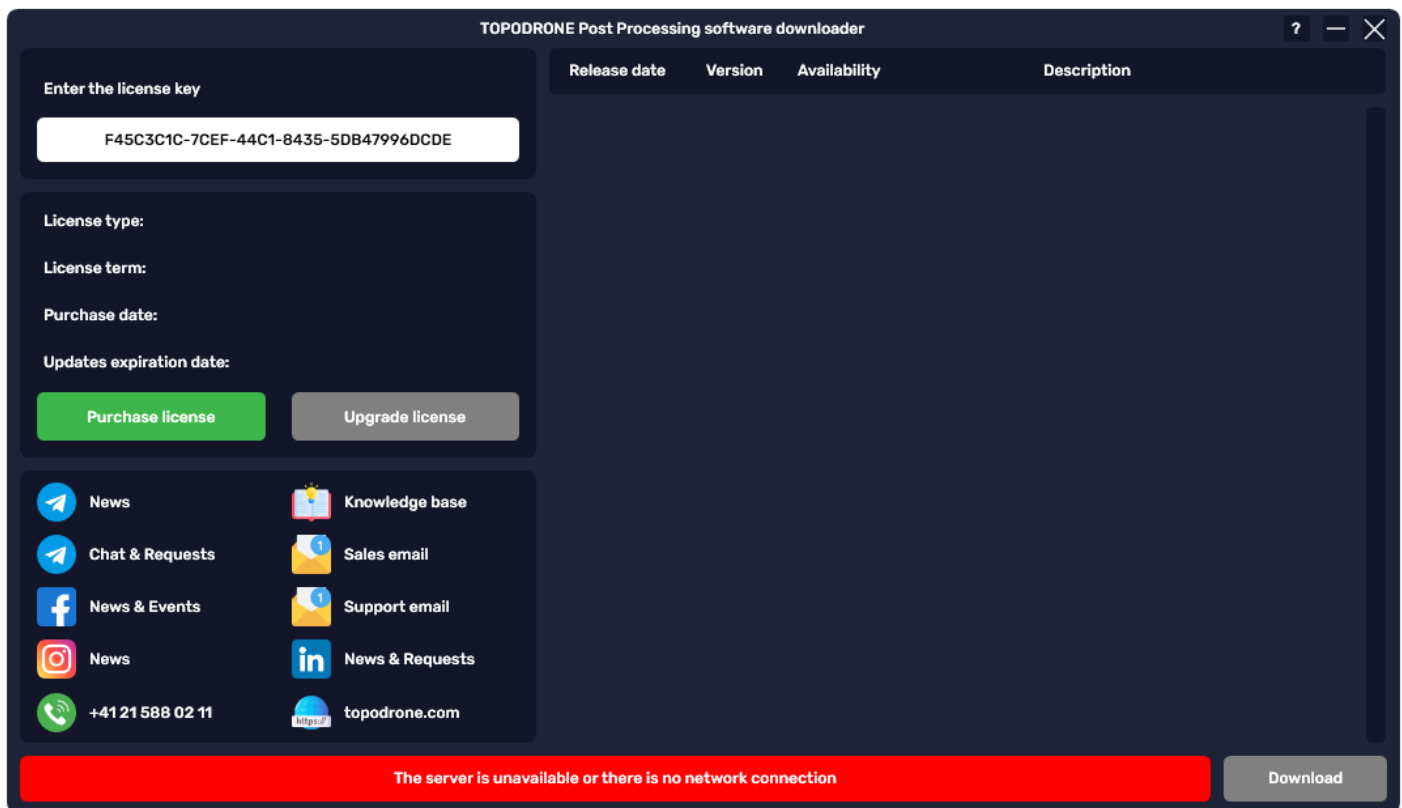

After connecting to the Internet, the TPP software downloader must be restarted.