


General

In the general settings of the TOPODRONE Post Processing program, you can perform the following actions:

Change the language of the program interface and output logs during processing.




In the "Geoids" window you can add or remove the type of geoid to be used in postprocessing. If necessary, you can import another geoid in *.gtx format. To do this, click the "Add" button and select the required file.

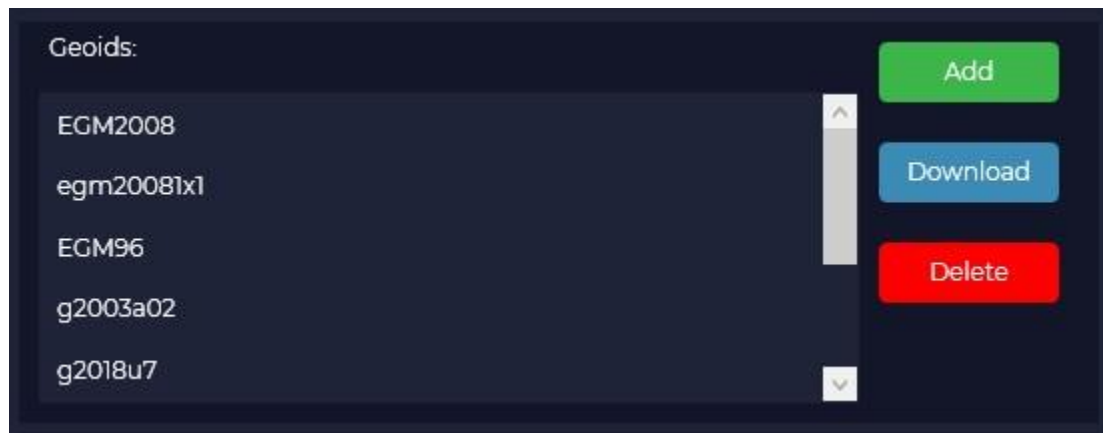

If necessary, you can delete a geoid model from the list by clicking the "Delete" button.

It is also possible to download a geoid model from the server. To do this, click the "Download" button, find the required geoid model and click the "Download" button.

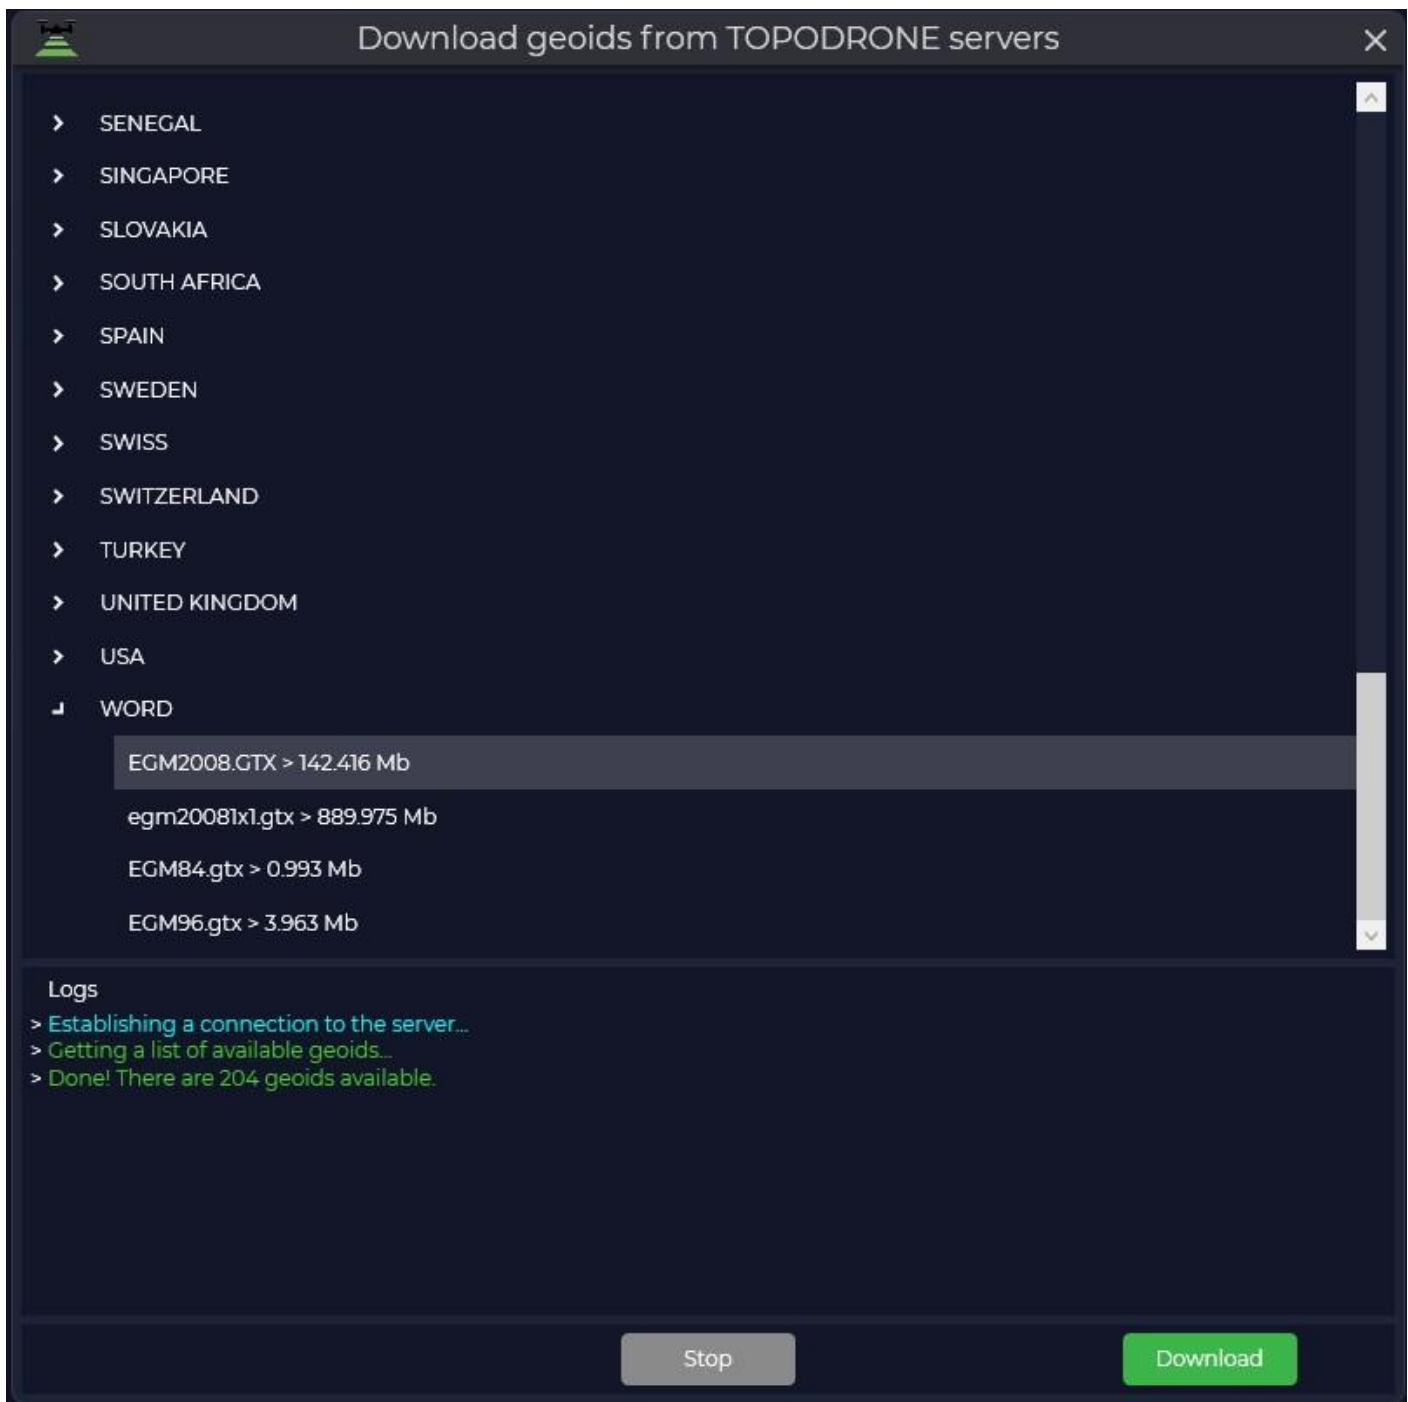


The "PRJ" window displays a list of available coordinate systems that will be available for selection during postprocessing.



You can add or remove the required coordinate system from the list. To add a coordinate system, click the "Add" button and select the desired file. Files in *.prj formats are supported, other coordinate system formats are not supported.

If it is necessary to delete a coordinate system from the list, click the "Delete" button. Complete deletion of imported coordinate systems is possible only after program restart. The "Calibrations" menu displays available calibration parameters, which are used for transition from one coordinate system to another.

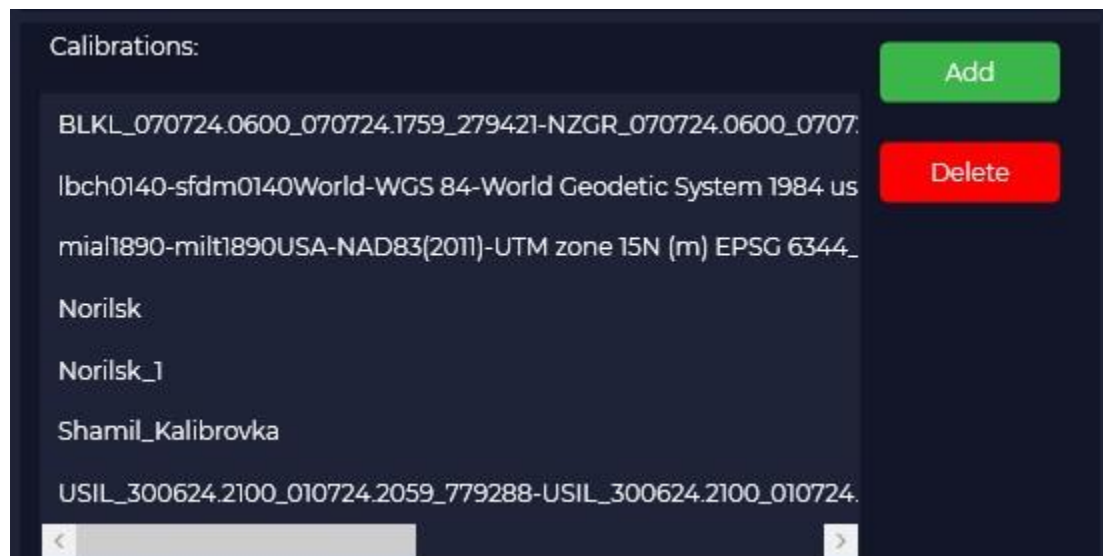

By default, several calibration files are added for some zones. To add a calibration parameter, click the "Calibrations" button and select the desired file. Files in *.tpc format are supported, other coordinate system formats are not supported.

Revision #5

Created 22 August 2024 09:55:50 by TOPODRONE SUPPORT

Updated 19 November 2024 07:18:29 by TOPODRONE SUPPORT